

| | |
|-----------------|----------------|
| Document Number | QW_02_0023.001 |
|-----------------|----------------|

GloT AT Command for LoRa Module

Table of Contents

| | |
|--|----|
| 1 Purpose..... | 2 |
| 1.1 Scope | 2 |
| 1.2 Terms and Abbreviations | 2 |
| 1.3 Uart..... | 2 |
| 2 Command Overview | 3 |
| 2.1 Command groups | 3 |
| 2.1.1 Common commands..... | 3 |
| 2.1.2 Data commands | 3 |
| 3 AT command list..... | 5 |
| 3.1 Common command list | 5 |
| 3.2 Data command list..... | 5 |
| 3.3 MAC Configuration command list..... | 5 |
| 3.4 SYS Configuration command list | 6 |
| 4 Command Description | 7 |
| 4.1 Definitions | 7 |
| 4.2 Common command..... | 7 |
| 4.3 Data command | 9 |
| 4.4 MAC command..... | 11 |
| 4.5 SYS command | 20 |

1 Purpose

1.1 Scope

This document is intended as a reference guide to the usage of the AT command set for the LoRa module unit. This document only applies to the Gemtek GIOT series.

The intended audiences for this document are the field test engineers, product and intelligent peripheral developers.

1.2 Terms and Abbreviations

Asynchronous

A serial data transmission method that uses Start and Stop bits to synchronize reception.

AT Commands

A group of commands that can be sent by a terminal or host computer to control the ISU in Command mode.

Baud

One signaling element per second. This is a measure of the signaling rate on the telephone

LMU

Lora module unit

LoRaWAN

Long Range network protocol


1.3 Uart

Uart - Universal Asynchronous Receiver/Transmitter, the baud rate depends on the hw platform. We expect that the default baud is 9600.

2 Command Overview

2.1 Command groups

The LMU employs three principle types of AT commands group: common, data, mac, and sys. The two types have differing syntax used to query and update their settings. They also have unique reference standards.

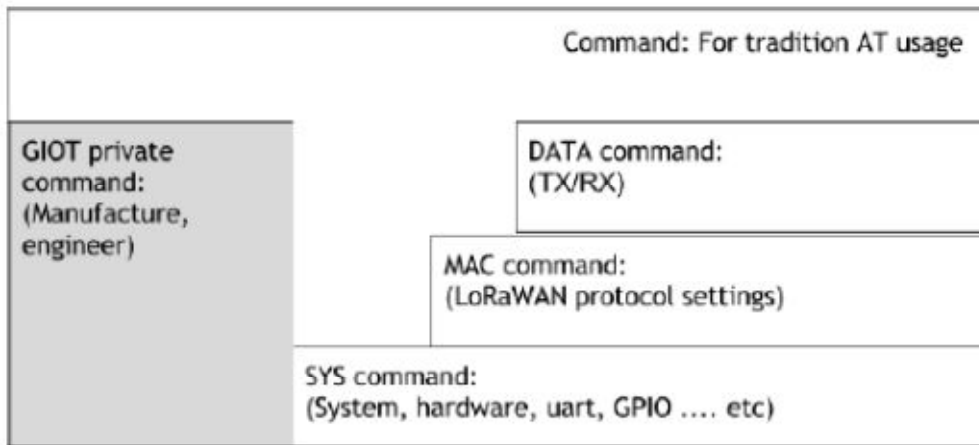

2.1.1 Common commands

These commands are used to perform AT behavior or debug usage.

2.1.2 Data commands

A specific communication AT command is used to transmit and receive LoRaWAN message. It consist of all ASCII alpha character but below list is not accepted: "

2.1.3 MAC Configuration commands

Media access control command. Configuration of AT commands is for query and adjusts LoRaWAN™ protocol settings. Most configuration commands include a prefix of + followed by a single alpha character.

2.1.4 SYS Configuration commands

Configuration of AT commands is for query and adjusts hardware (GPIO, Baud rate, etc). Most configuration commands include a prefix of + followed by a single alpha character.

2.2 Commands example

Example:

| | | |
|-------------|---------------|-----------------------------|
| Enter: | AT+SGMR? | Display firmware version |
| LMU return: | +SGMR:"1.1.0" | Revision for the LUM |
| Enter: | AT+CSF=9 | Set spreading factor to LMU |
| LMU return: | OK | SF was setted correctly |

2.3 Commands line

```
ATCMD1<CR>
ATCMD2=12<CR>
AT+CMD3=,,15;<CR>
AT+CMD4?<CR>
AT+CMD5=?<CR>
```

- <CR> command line termination character
- ,, subparameters may be omitted
- + extended command
- ; extended commands are delimited with semicolon

2.4 Information responses and result codes

```
<CR><LF>+CMD1:3,0,14,"GIOT"<CR><LF>
<CR><LF>+CMD2: (0-3),(0,1),(0-12,15),("GIOT","GEMTEK")<CR><LF>
<CR><LF>OK<CR><LF>
```

- +CMD1 is response of +CMD1?
- +CMD2 is response of +CMD2=?
0-12 means range like 0~12
"GIOT" as a string
- If the command line is performed successfully, the string "OK" is sent.

2.5 Error of responses

```
<CR><LF>+CMD ERROR:<reason><CR><LF>
```

- All command need to have ERROR reply
- If the command is not supported or unknown, either "+CMD ERROR: unknown" or "+CMD ERROR:operation not supported" is sent

2.6 Default value

If the command parameters are optional, they can be left out in the command line. If not otherwise specified, the default values are assumed as follows

- In case of Number type parameters, the default value is 0
- In case of String type parameters, the default value is an empty string

3 AT command list

- Command support list depends on each platform. Before development, please use *AT&H* to list down available commands for reference.

3.1 Common command list

| Command | Description |
|---------|---|
| AT | Attention command |
| A/ | Repeat previous command line |
| ATZ | Reset peer client device |
| AT&F | Resets the current profile to factory-defined defaults. |
| AT&W | Save current configuration |
| AT&H | List all available AT commands |

3.2 Data command list

| Command | Description |
|---------|--|
| AT+DTX | Transmit message to LoRa server |
| AT+DRX | Query the latest message from buffer of LMU |
| AT+DRXI | Clear and query indication of RX buffer status |
| AT+DTTX | Transmit dummy message to LoRa server |

3.3 MAC Configuration command list

| Command | Description |
|---------|----------------------------|
| AT+CSF | Spreading factor |
| AT+CPIN | Query PIN code |
| AT+CSID | Query system ID |
| AT+CSQ | Signal strength indication |

| | |
|-----------|--|
| AT+CSYNC | Asynchronous and Synchronous with gateway's ack |
| AT+CRPTM | Set and query Reporter mode to enable or disable |
| AT+CAPORT | Set the port used for application data |
| AT+CBAP | Enable application port filter |
| AT+CTXP | Set and query Tx power |
| AT+CPT | For ping pong test |
| AT+CKEY | Modify GIOT key |
| AT+CMAC | Query and Set Mac |
| AT+CCH | Modify Channel assignment |
| AT+CCHO | Modify channel offset |
| AT+CRXC | Modify Rx 2 settings |

3.4 SYS Configuration command list

| Command | Description |
|-----------|---|
| AT+IBR | Specifies the data rate(baud rate) at which the DCE accepts commands on UART interface. |
| AT+ECHO | Enable or disable uart echo |
| AT+SPWMOD | Select power saving mode of LMU |
| AT+SLMR | Revision of LoRa module |
| AT+SGMR | Firmware version |
| AT+SGMI | Manufacture ID |
| AT+SGMM | Model identification |
| AT+SGMD | MAC and serial number of LMU |
| AT+STIMER | Enable timer for reporting GPIO status |
| AT+SIRQ | Enable IRQ trigger types |
| AT+SGPIO | Query GPIO status |

4 Command Description

4.1 Definitions

GloT AT is "GloT's Attention" which is sent from TE(Terminal Equipment) or DTE(Data terminal equipment) to TA(Terminal Adapter) or DCE (Data Circuit Terminating Equipment). There are four types:

1. **No variable command:** AT[+|&]<Command>
Example: ATZ, AT+DTX, AT&H
2. **Read command:** AT[+|&]<Command>?
Example: AT+CLMR?
3. **Test command:** AT[+|&]<Command>=?
Example:AT+CLMR=?
4. **Execute/Set command:** AT[+|&]<Command>=<var1>,<var2>...
Example:AT+CSF=9

4.2 Common command

AT

The AT commands are used to control the operation of your LMU. They are called AT commands because the characters AT must precede each command to get the ATtention of the device. This command always returns OK. It can use to wake-up device.

| Type | Syntax | Response/Action |
|------|--------|-----------------|
| | AT | OK |

A/

This command repeats the last command of the open session. Only the A/ command itself cannot be repeated. If this command is the first one of the open session, the response is OK without any treatment.

| Type | Syntax | Response/Action |
|---------|----------------|--|
| | A/ | |
| Example | AT+SLMR? A/ | +SLMR:"1.1.0" OK +SLMR:"1.1.0" OK |

ATZ

This command restores the configuration profile from non-volatile memory (EEPROM) and reset LMU.

| Type | Syntax | Response/Action |
|------|--------|-----------------|
| | ATZ | none |

AT&F

Restore factory-defined defaults to memory(EEPORM). The configurations of IBR, ECHO, SPWMOD, CSF, CTXP, CRPTM, SIRQ and STIMER will be reset.

| Type | Syntax | Response/Action |
|------|--------|-----------------|
| | AT&F | OK |

AT&W

This command saving the current profile to non-volatile memory (EEPROM)

| Type | Syntax | Response/Action |
|------|--------|-----------------|
| | AT&W | OK |

AT&H

List all available AT commands

| Type | Syntax | Response/Action |
|------|--------|-----------------|
| | AT&H | ... OK |

Example:

```
AT&H                AT,A/,ATZ,AT&F,AT&W,
                    +IBR, +DTX,...
                    OK
```

4.3 Data command

□ AT+DTX

Transmit message through LMU. Transmitting mode supports two ways, asynchronous and synchronous, depending on configuration command AT+CSYNC

- Synchronous mode: Transmitting done with RF then return OK when it is in transmitting memory buffer. After transmit success, return "Receive ACK" means gateway has receive success and ACK was get by LMU. If LMU return "Tx Timeout", it means this transmission does not arrive in gateway.
- Asynchronous mode: Messages is ready in transmitting memory buffer, then return OK

NOTE: In different SF setting, the payload length would be also changed. It depends on channel assignment and channel hopping limitation. You can query the limitation through command "AT+DTX=?"

For example in 0.4s limitation:

| SF | Max length (bytes) | Remark |
|----|--------------------|--------|
| 10 | 11 | |
| 9 | 50 | |
| 8 | 50 | |
| 7 | 50 | |

| Type | Syntax | Response/Action |
|-----------|---|--|
| Set | AT+DTX=<length>,<val> NOTE: length of val is 11 with ASCII character in SF10 NOTE: length of val is 22 with Hex in SF10 | OK When error: +DTX ERROR:<report> |
| Read | None | |
| Test/Help | AT+DTX=? | +DTX=length, payload OK |

Example:

```
AT+DTX=11,"12345ABCdef"           OK
AT+DTX=22,0123456789abcdef012345 OK
```

NOTE: The char " can not be transmitted through ASCII mode

NOTE: Different SF uses different length of payload

NOTE: The number of length MUST be even in Hex mode.

AT+DRX

Query message from buffer of LMU and clear by command. When message is in RX buffer, Pin PA8 will be indicated.

| Pin | Indication | Remark |
|-----|------------|--------|
| PA8 | 0/1 | |

| Type | Syntax | Response/Action |
|-----------|----------|---|
| Set | None | |
| Read | AT+DRX? | +DRX:<length>,<Hex> OK When error: +DRX ERROR:<report> |
| Test/Help | AT+DRX=? | +DRX=<length of Rx data>,<value of Rx data> OK |

Example:

```
AT+DRX?                                +DRX:12,012345abcdef
                                         OK
```

AT+DRXI

Clear and query status of pin PA8, this variable of +DRXI only can be set to 0 by this command

| Type | Syntax | Response/Action |
|-----------|---------------|-----------------------|
| Action | AT+DRXI=<val> | OK |
| Read | AT+DRXI? | +DRXI=<status:0/1> |
| Test/Help | AT+DRXI=? | +DRXI=<status of pin> |

Example:

AT+DRXI=0 OK

AT+DTTX

Transmit debug message through LMU to cloud server for testing purpose.

Content of message: MAC address of LMU.

EX: 04000001 will be transmitted to cloud server.

| Type | Syntax | Response/Action |
|-----------|---------|-----------------|
| Action | AT+DTTX | OK |
| Read | None | |
| Test/Help | None | |

Example:

AT+DTTX OK

Note: The transmit error code can reference function of DTX

4.4 MAC command

AT+CSF

Change the spreading factor of LMU

| Type | Syntax | Response/Action |
|-----------|--------------------------|------------------------------|
| Set | AT+CSF=<Tx val>,<Rx val> | OK |
| Read | AT+CSF? | +CSF:<Tx val>,<Rx val> OK |
| Test/Help | AT+CSF=? | +CSF=<Tx 7-10>,<Rx 7-10> |

Example:

AT+CSF? +CSF:9,10
OK

AT+CPIN

Update and query PIN code of LMU

| Type | Syntax | Response/Action |
|-----------|----------|---------------------|
| Set | None | |
| Read | AT+CPIN? | +CPIN:<value> OK |
| Test/Help | None | |

Example:

```
AT+CPIN?                +CPIN:1234
                        OK
```

AT+CSID

Update and query system ID of LMU

| Type | Syntax | Response/Action |
|-----------|----------|-------------------------|
| Set | None | |
| Read | AT+CSID? | +CSID:"System ID" OK |
| Test/Help | None | |

Example:

```
AT+CSID?                +CSID:"04"
                        OK
```

AT+CSQ

Scanning for signal strength indication

| Type | Syntax | Response/Action |
|-----------|---------|--|
| Set | None | |
| Read | AT+CSQ? | +CSQ: 1:<Channel 1 rssi> 2:<Channel 2 rssi> ... 15:<Channel 15 rssi> |
| Test/Help | None | |

Example:
AT+CSQ?

```
+CSQ:
0:-157
1:-157
2:-157
3:-157
4:-157
5:-157
6:-157
7:-157
8:-164
9:-164
10:-164
11:-157
12:-157
13:-157
14:-157
15:-157
```

AT+CSYNC

Query or change Asynchronous or Synchronous mode when transmitting. When it is in sync mode, the timeout value is default to 60s. Transmit will be terminated if new transmit task coming.

| Type | Syntax | Response/Action |
|-----------|----------------|--------------------|
| Set | AT+CSYNC=<0-1> | OK |
| Read | AT+CSYNC? | +CSYNC:<val> OK |
| Test/Help | AT+CSYNC=? | +CSYNC=<0-1> |

```
AT+CSYNC?          +CSYNC:1
                   OK
```

AT+CRPTM

Set and query Reporter mode to enable or disable

| Type | Syntax | Response/Action |
|-----------|----------------|--------------------|
| Set | AT+CRPTM=<0-1> | OK |
| Read | AT+CRPTM? | +CRPTM:<val> OK |
| Test/Help | AT+CRPTM=? | +CRPTM=<0-1> |

```
AT+CRPTM?                    +CRPTM:1
                              OK
```

AT+CAPORT

Set and query the port used for application data. This command will change the LoRaWAN packet which has an associated port value. Port 0 is reserved for MAC command and 1-223 are available. Default is 1.

| Type | Syntax | Response/Action |
|-----------|-------------------|---------------------|
| Set | AT+CAPORT=<1-223> | OK |
| Read | AT+CAPORT? | +CAPORT:<val> OK |
| Test/Help | AT+CAPORT=? | +CAPORT=<1-223> |

```
AT+CAPORT?                    +CAPORT:1
                              OK
```

AT+CBAP

Set and query the port used for assigning which Rx port want to receive. Port value -1 is received all Rx port. Default is -1.

| Type | Syntax | Response/Action |
|-----------|--------------------|-------------------|
| Set | AT+CBAP=<-1,1-223> | OK |
| Read | AT+CBAP? | +CBAP:<val> OK |
| Test/Help | AT+CBAP=? | +CBAP=<-1,1-223> |

```
AT+CBAP=1                    OK
AT+CBAP?                     +CBAP:1
                              OK
```

AT+CTXP

Set and query Tx power index.

| Tx Power Index | Configuration (if supported) |
|----------------|------------------------------|
| 0 | 20 dBm(if supported) |
| 1 | 14 dBm |
| 2 | 11 dBm |

| | |
|-------|-------|
| 3 | 8 dBm |
| 4 | 5 dBm |
| 5 | 2 dBm |
| 6..15 | RFU |
| | |

Note: Use dBm, not use index.

| Type | Syntax | Response/Action |
|-----------|-----------------|---|
| Set | AT+CTXP=<index> | OK |
| Read | AT+CTXP? | +CTXP:<val> OK |
| Test/Help | AT+CTXP=? | +CTXP=+CTXP=<Tx Power index>, [min,max] |

AT+CTXP?

+CTXP:0
OK

AT+CTP

For ping pong test

TXPP(Master or slave ping pong for testing PER)

- Description:

For ping master or slave mode, could be used to test PER; sets one node to MASTER and another to SLAVE, the slave side will prints out how many packets received in configured time interval.

- Command:

· AT+CPT=" TXPP,isMaster,NumOrInterval,freq,pwr,bwd,sf,coderate,□xLen,crcOn,iqlvt,TxOrRxTimeout,Symbol"

| Parameter | Description |
|---------------|---|
| isMaster | Sets to master or slave mode [0: Slave, 1:Master] |
| NumOrInterval | Number of packets to be transmitted or Rx time Interval in secs [0001 ~ 9999] |
| freq | Frequency to be used, 4 frequency intervals and accurate to the 3rd decimal from [902.000~928.000, 855.000~881.000, 457.000~483.000, 421.000~447.000] |
| pwr | Sets the output power in dBm [02 ~ 20] |

| | |
|---------------|---|
| bwd | Sets the bandwidth [0: 125kHz, 1: 250kHz, 2: 500kHz] |
| sf | Sets the data-rate [0: SF12, 1: SF11, 2: SF10, 3: SF9, 4: SF8, 5: SF7, 6: SF7H] |
| Coderate | Sets the coding rate [1: 4/5, 2: 4/6, 3: 4/7, 4: 4/8] (Starts from 1, NOT 0) |
| fixLen | Fixed length packets [0: variable, 1: fixed] |
| crcOn | Enables disables the CRC [0: OFF, 1: ON] |
| iqIvt | Inverts IQ signals [0: not inverted, 1: inverted] |
| TxOrRxTimeout | Sets the timeout in milliseconds for Tx or Rx [0001 ~ 9999] |
| Symbol | Set same symbol of master and slave. |

- Result:

| Response | Description |
|----------|-------------|
| OK | Success |
| ERROR | Failed |

- Example: Master

Ping mode, Master, 100 packets, 915.888MHz, 20dBm, BW 500kHz, SF7, Code Rate 4/5, Variable length, CRC on, Not inverted, Tx timeout 35 milliseconds, Symbol 1234

| Input | Response |
|---|---|
| AT+CPT="TXPP,1,0100,915.888,20,2,5,1,0,1,0,0035,1234" | Start Master Ping Pong OK Packets already transmitted, now leaving TXPP mode. |

- Example: Slave:

Ping mode, Slave, 90 seconds, 915.888MHz, 0dBm, BW 500kHz, SF7, Code Rate 4/5, Variable length, CRC on, Not inverted, Rx timeout 100 milliseconds, symbol 1234

| Input | Response |
|---|---|
| AT+CPT="TXPP,0,0010,915.888,00,2,5,1,0,1,0,0100,1234" | Start Slave Ping Pong OK 100 packets including DONE message received in 2 seconds, now leaving TXPP mode. |

Quit TXPP

- Description:

Quit running test if TXPP is running

Command:

. AT+CPT="QUIT"

- Example:

| | Input | Response |
|---|---------------|-----------------------|
| 1 | AT+CPT="QUIT" | QUIT: Stop TXPP OK |

- Result:

| Response | Description |
|-----------------|-------------------|
| QUIT: Stop TXPP | Success Stop TXPP |
| Failed | Failed |

TXCM (Tx continue mode)

- Description:

For Tx continuous mode, can be used to test Tx power and Tx frequency.

- Command:

. AT+GPT=" TXCM,freq,pwr,bwd,sf,coderate,xLen,crcOn,iqlvt"

| Parameter | Description |
|-----------|---|
| freq | Frequency to be used, 4 frequency intervals and accurate to the 3rd decimal from [902.000~928.000, 855.000~881.000, 457.000~483.000, 421.000~447.000] |
| pwr | Sets the output power in dBm [02 ~ 20] |
| bwd | Sets the bandwidth [0: 125kHz, 1: 250kHz, 2: 500kHz] |
| sf | Sets the data-rate [0: SF12, 1: SF11, 2: SF10, 3: SF9, 4: SF8, 5: SF7, 6: SF7H] |
| bwd | Sets the bandwidth [0: 125kHz, 1: 250kHz, 2: 500kHz] |
| sf | Sets the data-rate [0: SF12, 1: SF11, 2: SF10, 3: SF9, 4: SF8, 5: SF7, 6: SF7H] |

| | |
|----------|--|
| coderate | Sets the coding rate [1: 4/5, 2: 4/6, 3: 4/7, 4: 4/8] (Starts from 1, NOT 0) |
| fixLen | Fixed length packets [0: variable, 1: fixed] |
| crcOn | Enables disables the CRC [0: OFF, 1: ON] |
| iqIvt | Inverts IQ signals [0: not inverted, 1: inverted] |

- Result:

| Response | Description |
|---------------|-------------|
| Start TXCM OK | Success |
| ERROR | Failed |

- Example:

Tx continuous mode, 923.158MHz, 8dBm, BW 125kHz, SF12, Code Rate 4/5, Variable length, CRC on, Not inverted

| Input | Response |
|--------------------------------------|---------------|
| AT+GPT="TXCM,923.158,08,0,0,1,0,1,0" | Start TXCM OK |

AT+CKEY

Update and query GIOT key of LMU

| Type | Syntax | Response/Action |
|-----------|---|---|
| Set | AT+CKEY=<Network key: length is 32>,<Application key: length is 32> | OK |
| Read | AT+CKEY? | +CKEY=<network key>,<application key> OK |
| Test/Help | AT+CKEY=? | +CKEY=<Network Key:length is 32>,<Application Key:length is 32> OK |

AT+CCH

Update and query channel assignment of LMU

| Type | Syntax | Response/Action |
|-----------|--|--|
| Set | AT+CCH=<Freq A1>,<Freq A2>,<Freq B1>,<Freq B2> | OK |
| Read | AT+CCH? | +CCH=<val>,<val>,<val>,<val>, al> |
| Test/Help | AT+CCH=? | AT+CCH=<Freq A1>,<Freq A2>,<Freq B1>,<Freq B2> |

Example:

AT+CCH=921000000,922000000,923000000,924000000
OK

AT+CCH?
+CCH=921000000,922000000,923000000,924000000
OK

AT+CCH=?
AT+CCH=<Freq A1>,<Freq A2>,<Freq B1>,<Freq B2>
OK

AT+CCHO

Update and query frequency offset of LMU

| Type | Syntax | Response/Action |
|-----------|---|---|
| Set | AT+CCHO=<Freq Offset 1>,<Freq Offset 2> | OK |
| Read | AT+CCHO? | +CCHO=<val 1>,<val 2> |
| Test/Help | AT+CCHO=? | AT+CCHO=<Freq Offset 1>,<Freq Offset 2> |

Example:

AT+CCHO=100000,300000
OK

AT+CCHO? +CCH=100000,300000
OK

AT+CRXC

Modify Rx 2 settings: freq, sf, bandwidth

| Type | Syntax | Response/Action |
|-----------|----------------------------|---|
| Set | AT+CRXC=<FREQ>,<BANDWIDTH> | OK |
| Read | AT+CRXC? | +CRXC:FREQ,BANDWIDT H |
| Test/Help | AT+CRXC=? | +CRXC=<Freq>,<Bandwid h> 0:125k, 1:250k, 2:500k |

Example:

AT+CRXC=923000000,2

OK

4.5 SYS command

AT+IBR

Specifies the data rate(baud rate) at which the DCE accepts commands on UART interface. The default value is 9600.

Note:

1. Please make sure cable quality with device, if you want to select baud rate over 9600.
2. The working baud rate also depends on your cable quality and uart chipset of host.

| Type | Syntax | Response/Action |
|-----------|---|------------------|
| Set | AT+IBR=<val> <val> 0 - Default 1 - 9600 bit/s 2 - 19200 bit/s 3 - 38400 bit/s 4 - 57600 bit/s 5 - 115200 bit/s | OK |
| Read | AT+IBR? | +IBR:<val> OK |
| Test/Help | AT+IBR=? | +IBR=<0-5> OK |

Example:

```
AT+IBR=0           OK
AT+IBR?           +IBR:0
                  OK
```

AT+ECHO

Enable or disable uart echo function

| Type | Syntax | Response/Action |
|-----------|------------------------------|---------------------|
| Set | AT+ECHO=<0-1> | OK |
| Read | AT+ECHO? <val> 0,1 | AT+ECHO:<val> OK |
| Test/Help | AT+ECHO=? | +ECHO=<0-1> OK |

Example:

```
AT+ECHO=1        OK
AT+ECHO?        +ECHO:1
                  OK
```

AT+SPWMOD

Select power saving mode of LMU. User can use IRQ1(PB7) to wake up LMU from low power mode.

| Type | Syntax | Response/Action |
|-----------|---|---------------------|
| Set | AT+SPWMOD=<val> <val> 0 - normal 1 - sleep | OK |
| Read | AT+SPWMOD? | +SPWMOD:<val> OK |
| Test/Help | AT+SPWMOD=? | +SPWMOD=<0-1> OK |

Example:

AT+SPWMOD=0
AT+SPWMOD?

OK
+SPWMOD:0
OK

AT+SLMR

Displays the revised hardware version.

| Type | Syntax | Response/Action |
|-----------|----------|-------------------|
| Set | None | |
| Read | AT+SLMR? | +SLMR:<val> OK |
| Test/Help | None | |

Example:

AT+SLMR?

+SLMR:"0.1"
OK

AT+SGMR

Displays the firmware version of LMU

| Type | Syntax | Response/Action |
|-----------|----------|-------------------|
| Set | None | |
| Read | AT+SGMR? | +SGMR:"val" OK |
| Test/Help | None | |

Example:

AT+SGMR?

+SGMR:"v1.08"
OK

AT+SGMI

Displays the manufacturer identification.

| Type | Syntax | Response/Action |
|-----------|----------|-------------------|
| Set | None | |
| Read | AT+SGMI? | +SGMI:"val" OK |
| Test/Help | None | |

Example:

```
AT+SGMI?                +SGMI:"GEMTEK"
                        OK
```

AT+SGMM

Displays the Model identification.

| Type | Syntax | Response/Action |
|-----------|----------|-------------------|
| Set | None | |
| Read | AT+SGMM? | +SGMM:"val" OK |
| Test/Help | None | |

Example:

```
AT+SGMM?                +SGMM:"WMDS-203"
                        OK
```

AT+SGMD

Query the MAC and serial number.

| Type | Syntax | Response/Action |
|-----------|-----------|---|
| Set | None | |
| Read | AT+SGMD? | +SGMD:"mac","sn" OK |
| Test/Help | AT+SGMD=? | +SGMD="MAC:length is 8","SN:length is 13" |

Example:

AT+SGMD?

+SGMD:"00000179","GLN015430004D"
OK

AT+STIMER

Enable timer for reporting GPIO status. If val of day is set, val of minutes should be 0 otherwise val of day will be ignored. Double 0 in "minutes" and "days" mean disable timer.

- When LMU is in report mode, it upload data format as:

Example: 00040020002002

14


0

| Index:1 ex:00 | GPIO Status:1 ex:04 | ADC0 - PB0 ex:0020 | ADC1 - PB1 ex:0020 | IRQ Status:1 ex:02 | | | | | | | | | | | | | | | | | | | | |
|------------------|---|-----------------------|-----------------------|-----------------------|-------------|---|-------------|---|-------------|-----|-----|---|-----|----------------------------|----------------------------|--|---|------------|---|-------------|-----|-----|---|-----|
| RFU | <table border="1"> <tr><td>0</td><td>R2D (PB8)</td></tr> <tr><td>1</td><td>Status(PA8)</td></tr> <tr><td>2</td><td>GPIn (PA11)</td></tr> <tr><td>3</td><td>GPIn (PA12)</td></tr> <tr><td>...</td><td>RFU</td></tr> <tr><td>7</td><td>RFU</td></tr> </table> | 0 | R2D (PB8) | 1 | Status(PA8) | 2 | GPIn (PA11) | 3 | GPIn (PA12) | ... | RFU | 7 | RFU | (Pin Voltage)*10 Ex: 33 | (Pin Voltage)*10 Ex: 33 | <table border="1"> <tr><td>0</td><td>IRQ0 (PB6)</td></tr> <tr><td>1</td><td>Timer (PB7)</td></tr> <tr><td>...</td><td>RFU</td></tr> <tr><td>7</td><td>RFU</td></tr> </table> | 0 | IRQ0 (PB6) | 1 | Timer (PB7) | ... | RFU | 7 | RFU |
| 0 | R2D (PB8) | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Status(PA8) | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | GPIn (PA11) | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | GPIn (PA12) | | | | | | | | | | | | | | | | | | | | | | | |
| ... | RFU | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | RFU | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | IRQ0 (PB6) | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Timer (PB7) | | | | | | | | | | | | | | | | | | | | | | | |
| ... | RFU | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | RFU | | | | | | | | | | | | | | | | | | | | | | | |

Pin definition:

| PIN | Type | Remark |
|------|------|---|
| PB6 | IRQ0 | 0/1 trigger TX |
| PB8 | R2D | 0/1 Use to restore to default and back to normal mode |
| PA11 | GPIn | 0/1 |
| PA12 | GPIn | 0/1 |
| PB0 | ADC | 12 bits |
| PB1 | ADC | 12 bits |

Work flow:

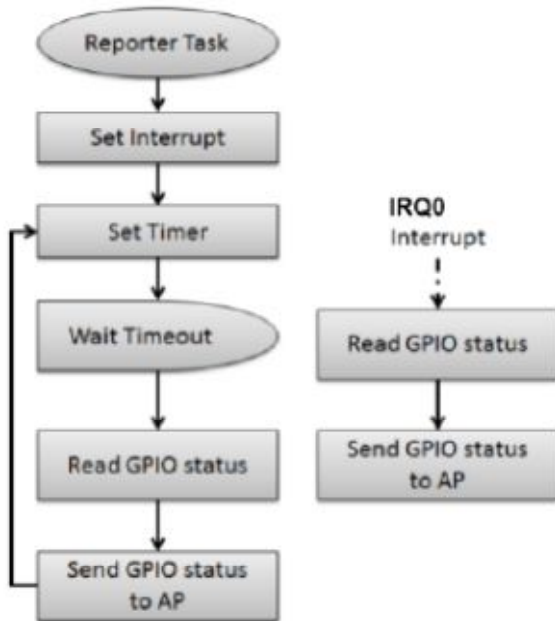

| Type | Syntax | Response/Action |
|-----------|--|---|
| Set | AT+STIMER=<val of minutes>,<val of days> | OK |
| Read | AT+STIMER? | +STIMER:<val>, <val> OK |
| Test/Help | AT+STIMER=? | +STIMER="val of minutes: 1-1440", "val of days: 1-365" |

Example:

AT+STIMER=30
 AT+STIMER=0,5
 AT+STIMER=0,0
 AT+STIMER?

OK // trigger in every 30 minutes
 OK // trigger in every five days
 OK // Disable timer
 +STIMER:0,5
 OK

AT+SIRQ

Enable/Disable IRQ0 and IRQ. IRQ0 is used to trigger LoRa frame sending in report mode. IRQ1 is used to wake-up MCU from power saving mode and it can not be disabled by command.

| PIN | Type | Remark |
|-----|------|---------------------------|
| PB6 | IRQ0 | 0 - disable 1 - enable |
| PB7 | IRQ1 | Can't be disabled |

| Type | Syntax | Response/Action |
|-----------|---------------|---------------------------|
| Set | AT+SIRQ=<val> | OK |
| Read | AT+SIRQ? | +SIRQ:<val of IRQ0> OK |
| Test/Help | AT+SIRQ=? | +SIRQ=<0-1> |

Example:

AT+SIRQ=1
AT+SIRQ?

OK
+SIRQ:1
OK

AT+SGPIO

Query GPIO status through PIN list

| PIN | Type | Remark |
|------|------------|---------|
| PB6 | IRQ0 | 0/1 |
| PB7 | IRQ1/GPIIn | 0/1 |
| PB8 | GPIIn | 0/1 |
| PA11 | GPIIn | 0/1 |
| PA12 | GPIIn | 0/1 |
| PB0 | ADC | 12 bits |
| PB1 | ADC | 12 bits |

| Type | Syntax | Response/Action |
|-----------|------------|---|
| Set | None | |
| Read | AT+SGPIO? | +SGPIO:<PB6>,<PB7>,<PB8>,<PA11>,<PA12>,<PB0>,<PB1> OK |
| Test/Help | AT+SGPIO=? | +SGPIO="Display status of PINs:<PB6>,<PB7>,<PB8>,<PA11>,<PA12>,<PB0>,<PB1>" |

Example:

AT+SGPIO?

+SGPIO:0,0,1,0,1,500,2055
OK

